


### Removal

---


1 Disconnect battery negative terminal.

2 Pull off knob (3) (mounted conically).

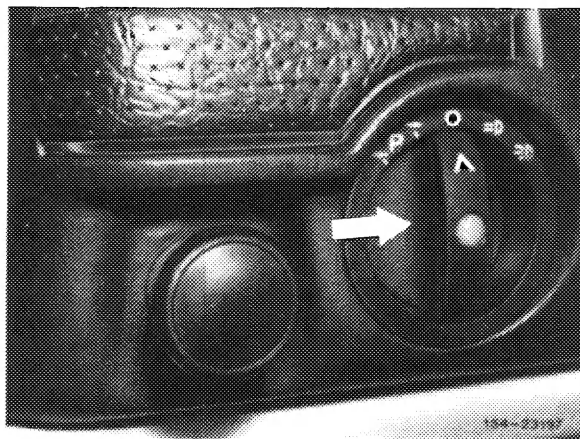

3 Unscrew nut and remove cover with symbols.

4 Remove cover under instrument panel left (68–150).

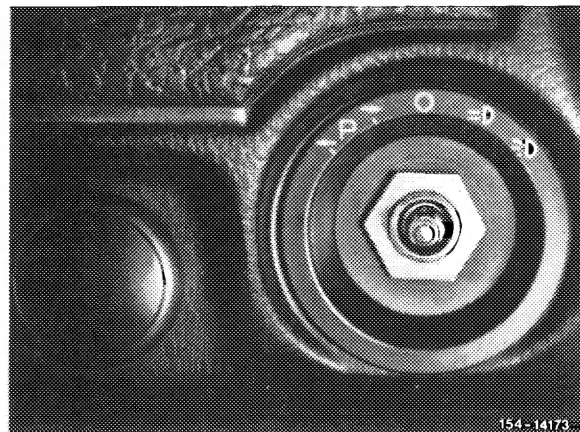



5 Remove rotary light switch from instrument panel in downward direction.

### Installation

---

6 For installation proceed vice versa. Make sure that rotary light switch (1) and cover (2) are engaging in recess.

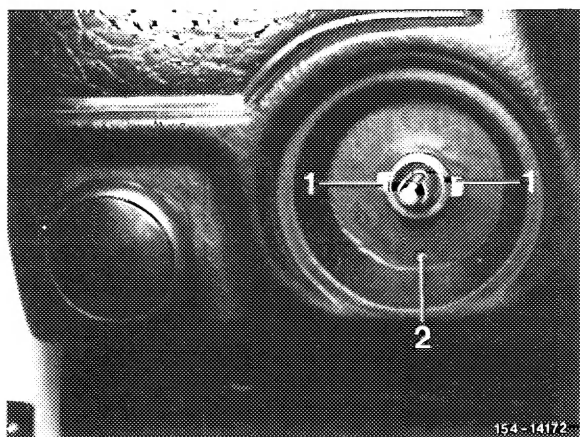

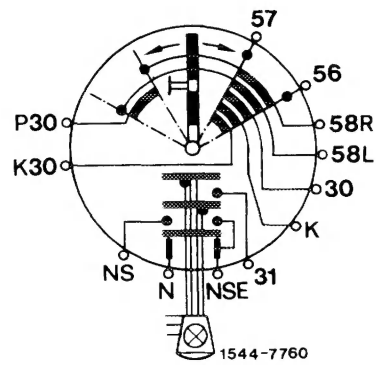

**Connection diagram rotary light switch**

Terminal	Designation	Line cross section mm <sup>2</sup>	Cable color
30	Battery plus	6	red
K 30	Licence plate lamp input	0.75	grey/red
P 30	Standing lamp input	0.75	green/white
31	Ground for rear fog lamp	0.75	brown
56	Driving lamp	2.5	white/yellow
57	—	—	—
58 L	Parking-, tail lamp left	1.5	grey/white
58 R	Parking-, tail lamp right	1.5	grey
NSE	Rear fog and fog lamp input	1.5	grey/yellow/green
NS	Rear fog lamp output	0.75	grey/green/white
N	Fog lamp output	1.5	grey/green
K	Instrument lamps input	0.5	grey/green/purple
	Licence plate lamps, switch lamps	0.75	grey/purple